Curtain Poles and Track

SQUARE30 BENDABLE INSTRUCTIONS



- ① BENDING INFORMATION
- ② JOINING THE TRACK
- ③ BRACKET INFO & TRIMMING
- ④ BENDING INSTRUCTIONS
- ⁵ FACE FIXING
- ⁽⁶⁾ TOP FIXING
- ⑦ SURF GLIDERS & GLIDER BRAKES
- ③ DOUBLE TRACKS
- IECHNICAL DETAILS







Curtain Poles and Track

BENDING INFORMATION



FORWARD BENDS



REVERSE BENDS



CONTINUOUS BENDS



Bendable by hand



A former can be supplied to help with bending (former with spring back gives track bend radius of 150mm)



ALWAYS BEND TRACK TOWARDS AN OPEN END

If you have a join, insert the joiner into one half the track before bending. This will help keep the centre ends flush for a smoother join. (next page)









Curtain Poles and Track

JOINING THE TRACK

JOINER MUST BE INSERTED BEFORE BENDING OTHERWISE YOU WOULD NEED TO TRIM AT THE JOIN







01404 47568

Curtain Poles and Track

BRACKET INFORMATION AND TRACK TRIMMING



With careful installation gliders will pass over the track joins. there is no limit to maximum track length







Curtain Poles and Track

BENDING INSTRUCTIONS

	Bend A Bend A Bend B Bend B Diagram shows track joiner attaching
	two track lengths at the window centre
1	All tracks over 3.0m long are supplied in 2 pieces. The track should be joined in the middle of the centre window or on a straight section of track.
2	Insert centre joiner, pushing the plastic filler (kerf) down the track and tighten the locking screws.
3	Bend from the centre working outwards from Bend A, then Bend B, then Bend C. Complete each bend before moving onto the next bend.
4	Because the joiner has been inserted and tightened, any uneveness in the track lengths should now be at the end of the track ready to be trimmed.
5	(Skip this part if your track is one single length) Remove the centre joiner and insert into other half of the track and repeat the process from part 3.
6	Once the track is bent to your required shape, join the tracks together (if needed) and trim off the uneven ends of the track.
7	Fit the track to the wall fixing bracket or directly to the ceiling (see Face fix or Ceiling fix pages)
8	If you have surf gliders and glider brakes, read that page before going further.
9	When the track is up slide the gliders inside followed by the end stop to fixed towards the end to anchor the curtains.
10	Finally, fit the finials onto the end of the track to cover the trimmed edges and attach the track cover to hide the join.







Curtain Poles and Track

FACE FIXING



www.



sales@CameronFuller.co.uk

Curtain Poles and Track



www.





Curtain Poles and Track

SURF GLIDER & GLIDER BRAKE



Standard wall brackets will allow curtains to stack back correctly with SURF60

SURF 80



Use adjustable (75mm-110mm) wall brackets to allow curtains to stack back correctly with SURF80

MAGNETIC GLIDER BRAKE to ensure curtains stay stacked back









Curtain Poles and Track

DOUBLE TRACKS



Curtain Poles and Track

TECHNICAL DETAILS

