



FRENCH POLE INSTRUCTIONS

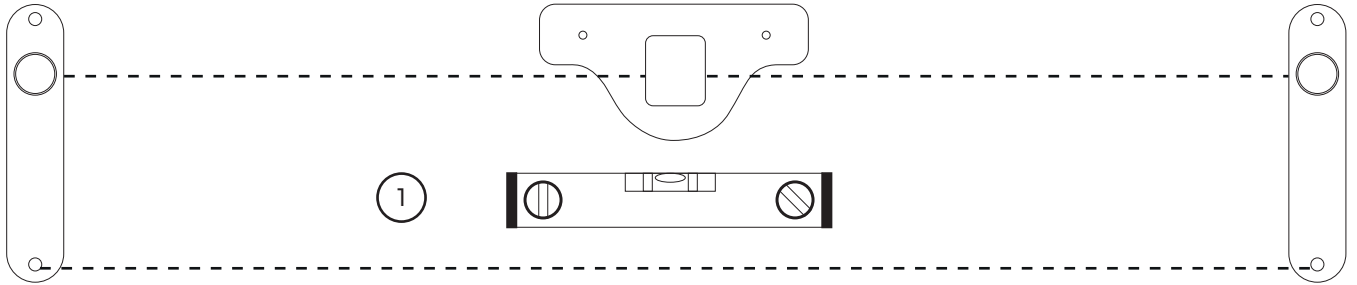


1 Fix the wall brackets, ensuring the ends line up with the central bracket




2 Pole trimmed at centre point

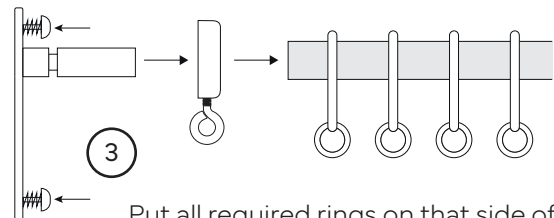


3 Put all required rings on that side of pole, followed by the locking collar

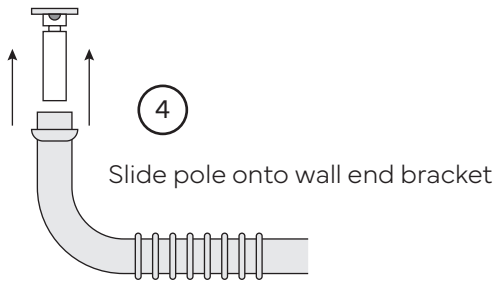


4 Slide pole onto wall end bracket

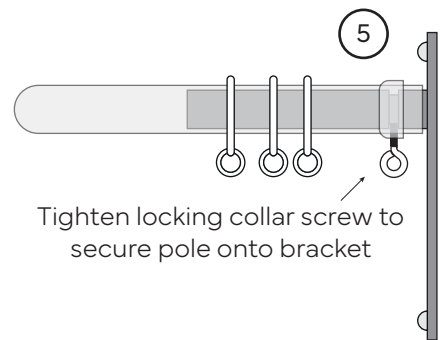

5 Tighten locking collar screw to secure pole onto bracket

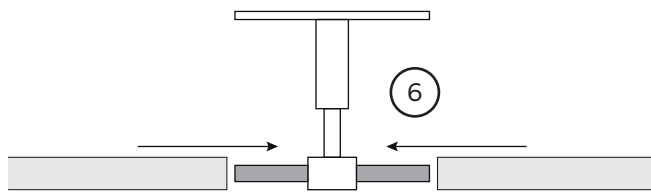

6 Poles slide onto joiner to meet within the central bracket and secured with grub screws

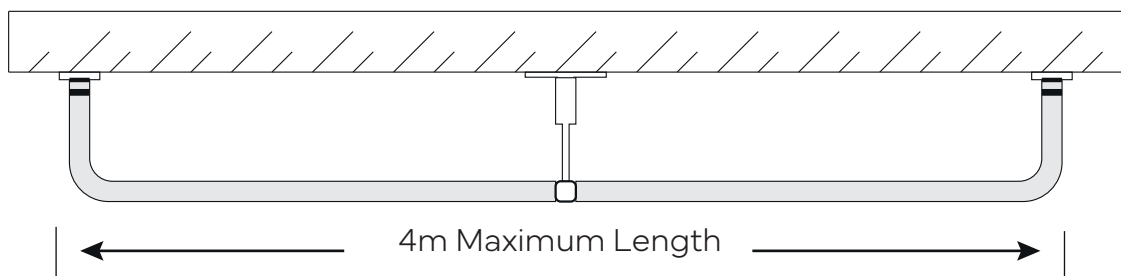

4m Maximum Length